

Алматы (7273)495-231
 Ангарск (3955)60-70-56
 Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Благовещенск (4162)22-76-07
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Владикавказ (8672)28-90-48
 Владимир (4922)49-43-18
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Коломна (4966)23-41-49
 Кострома (4942)77-07-48
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Курган (3522)50-90-47
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Ноябрьск (3496)41-32-12
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Петрозаводск (8142)55-98-37
 Псков (8112)59-10-37
 Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Саранск (8342)22-96-24
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Сургут (3462)77-98-35
 Сыктывкар (8212)25-95-17
 Тамбов (4752)50-40-97
 Тверь (4822)63-31-35

Тольятти (8482)63-91-07
 Томск (3822)98-41-53
 Тула (4872)33-79-87
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Улан-Удэ (3012)59-97-51
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Чебоксары (8352)28-53-07
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Чита (3022)38-34-83
 Якутск (4112)23-90-97
 Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://condor.nt-rt.ru> || crv@nt-rt.ru



Star/delta connection

Star/delta connection for the protective start of the motor



Fig. CSDU 7,5 complete

The Condor Pressure Control GmbH CSDU Star/delta connection offers, in due consideration of the relevant standards, the possibility of economically operating motors with a switching capacity greater than 4 kW using public mains networks.

With this 2-stage starter the inrush current (star circuit) is reduced by 1/3 of the height to be expected when starting the motor directly. The torque is equally reduced during start-up phase.

During the start-up phase (1 – 32 seconds), a special change-over relay with a contact switching time of 50 ms, guarantees reliable change over from star to delta operation.

During continuous operation, all motors connected to the Star/delta connection are protected by a manual motor starter with thermal and magnetic trip.

Standard executions contain a manual motor starter and an on / off switch for the control circuit. Complete star/delta connections additionally have a main circuit-breaker with enclosure locking, an emergency button, an hour meter and an operating LED.

Star/delta connections as standard-version with an additional transformer are used, if there is no neutral leader connected.

Type overview CSDU

Order reference	Description	Weight (in g)	Part No.
Complete version			
CSDU 5,5 complete	5,5 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter: 9 - 13 A (Rated current) Enclosure 200 x 400 x 140 mm (width x height x depth)	4100	256601
CSDU 7,5 complete	7,5 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter 14 - 20 A (Rated current) Enclosure 200 x 400 x 140 mm (width x height x depth)	4250	256618
CSDU 11,0 complete	11 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter 19 - 25 A (Rated current) Enclosure 200 x 400 x 140 mm (width x height x depth)	4400	256625
CSDU 15,0 complete	15 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter 28 - 40 A (Rated current) Enclosure 300 x 400 x 140 mm (width x height x depth)	4550	256632
Standard version			
CSDU 5,5 standard	5,5 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter 9 - 13 A (Rated current) Enclosure 200 x 400 x 140 mm (width x height x depth)	3500	256656
CSDU 7,5 standard	7,5 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter 14 - 20 A (Rated current) Enclosure 200 x 400 x 140 mm (width x height x depth)	3650	256663
CSDU 11,0 standard	11 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter 19 - 25 A (Rated current) Enclosure 200 x 400 x 140 mm (width x height x depth)	3800	256670
CSDU 15,0 standard	15 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter 28 - 40 A (Rated current) Enclosure 300 x 400 x 140 mm (width x height x depth)	3950	256687
Standard version with transformer (trafo)			
CSDU 5,5 trafo	5,5 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter 9 - 13 A (Rated current) Enclosure 200 x 400 x 140 mm (width x height x depth)	4300	256717
CSDU 7,5 trafo	7,5 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter 14 - 20 A (Rated current) Enclosure 200 x 400 x 140 mm (width x height x depth)	4450	256724
CDU 11,0 trafo	11 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter 19 - 25 A (Rated current) Enclosure 200 x 400 x 140 mm (width x height x depth)	4600	256731
CSDU 15,0 trafo	15 kW, Ue: 400V AC / 50 Hz, Supply line: 3L/N/PE Manual motor starter 28 - 40 A (Rated current) Enclosure 300 x 400 x 140 mm (width x height x depth)	4750	256748

Other manual motor starters on request.

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47